
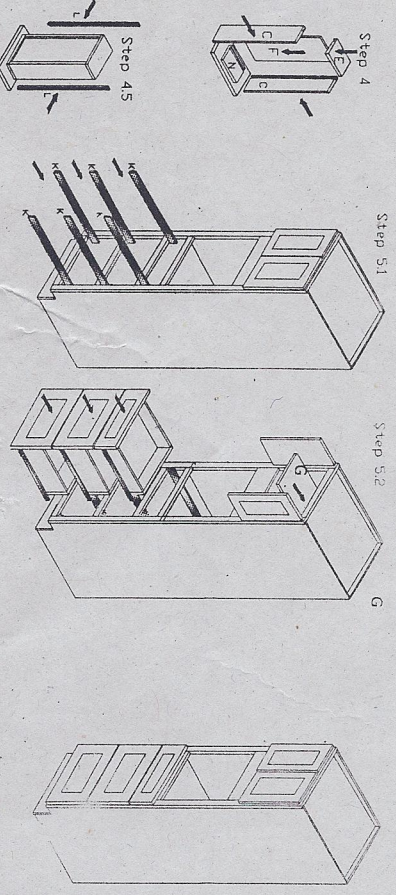


DOUBLE DOOR AND DRAWER OVEN CABINET ASSEMBLY INSTRUCTION

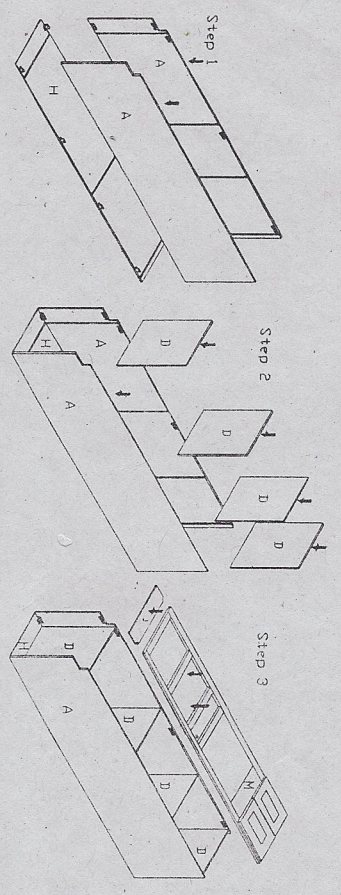

PARTS LIST:		ITEM	QTY	PARTS LIST:		ITEM	QTY
A	RIGHT/LEFT SIDE PANEL	2	E	DRAWER BACK PANEL	3		
D	BOTTOM PANEL	4	L	DRAWER SLIDE-DRAWER MEMBER	6		
H	BACK PANEL	1	K	DRAWER SLIDE-CABINET MEMBER	6		
M	FRONT FACE	1	G	SHELF			
J	TOE KICK PLATE	1					
N	DRAWER FRONT PANEL	3					
C	DRAWER LEFT / RIGHT SIDE PANEL	6					
F	DRAWER BOTTOM PANEL	3					

Step 1 -
1. Lay cabinet back panel (H) on a soft working surface with grooves facing upward. The grooves will be for the right/left side panel(A).

Step 2 -
1. Insert Bottom Panel (D) into the grooves of Side Panels (A) and Back Panel (H)

Step 3 -
1. Attach Front Face (M) onto Bottom Panel (D) and Side Panels (A) making sure panels fit into the grooves of the Front Face (M) and clips are lined up and fully engaged. Insert locking screw into each clip pair and tighten all screws.
2. Attach Toe Kick Plate (J) to Side Panels (A) making sure clips are lined up and fully engaged. Insert locking screw into each clip pair and tighten all screws.

Step 4 -
1. Lay a Drawer Front Panel (N) on a soft working surface with grooves facing upward. The grooves will be for the Drawer Bottom Panel (F).
2. Insert the Drawer Side Panels (C) to the dovetail grooves on the Drawer Front Panel (N) with all the dovetails engaged until flush.
3. Slide the Drawer Bottom Panel (F), finished surface faces upward, into the grooves of the Drawer Side Panels (C) and the Drawer Front Panel (N).

4. Attach Drawer Back Panel (E) to Drawer Side Panels (C) with all the dovetails engaged until flush.
5. Attach Drawer Slide - Drawer Members (L), to Drawer Side Panels (C) through pre-drilled holes with screws and tighten.

Step 5 -
1. Install Drawer Slide - Cabinet Members (K), by inserting the slide sockets barbed dowels into cabinet Back Panel (H) pre-drilled holes and use screws to attach the sockets to the back panel (H) through pre-drilled holes and tighten.
2. Attach Drawer Slide - Cabinet Members (K), to cabinet Side Panels (A) through pre-drilled holes with screws and tighten.
3. Slide drawers into drawer guides through the front of the cabinet.

4. Insert shelf clips into the pre-drilled holes on the Side Panels (A) at desired height and slide in the Shelf (G) making sure the front edge faces out.